


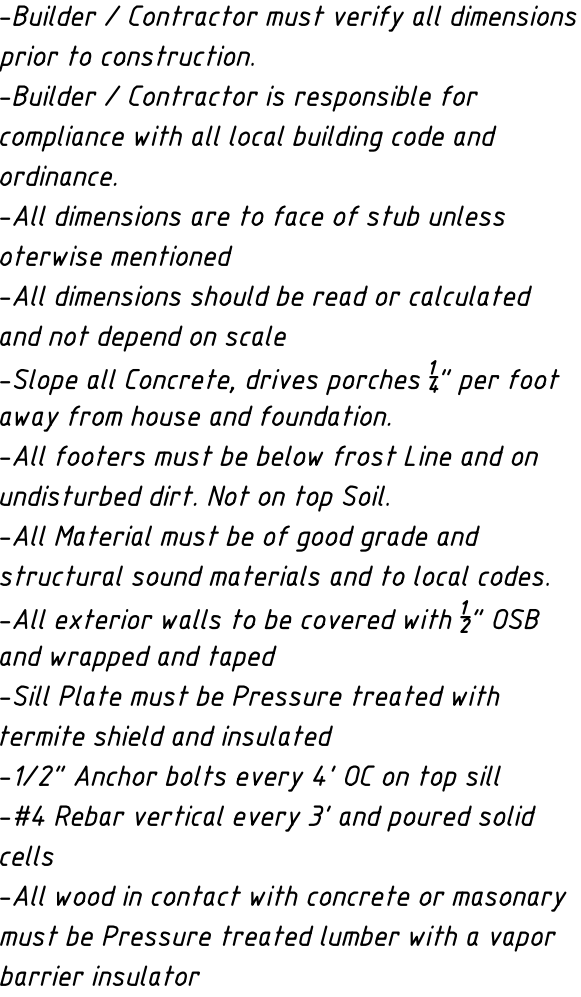

ALL FOOTERS MUST BE POURED TO LOCAL AND
STATE CODES.

ALL CONCRETE MUST MEET OR EXCEED LOCAL
STANDARD CODE.

FOOTER WIDTH AND DEPTH WILL BE DETERMINED
UPON HEIGHT OF STRUCTURE AND GROUND
DENSITY AND MATERIAL ACCORDING TO LOCAL
AND STATE CODES.


#4 REBAR TO BE PLACED IN FOOTER 3 PIECES
PARALLEL TIED TO CHAIRS TO MAINTAIN REBAR
IN CENTER OF FOOTERS.

VERTICLE #4 REBAR TO BE PLACED EVERY 48"
FOR FOUNDATION WALL ANCHORING THAT IS
BENT AND TIED TO HORIZONTAL FOOTER REBAR.
(SEE CUT VIEW DRAWING)

FOR SLOPED FOOTER WITH STEPPED FOOTERS, VERTICLES MUST BE SLOPED TO 3 TO 1 WITH A 1-1/2 TIMES THE THICKNESS OF FOOTERS. (REFER TO LOCAL BUILDING CODES FOR STEPPING FOOTERS)

FOOTERS ARE TO BE POURED UNDER THE LOCAL
FROST LINE AND ON SOLID UNDISTURBED DIRT.

ALL BLOCK WALLS TO BE POURED SOLID WITH A #4 REBAR RUNNING THE TOTAL VERTICAL DEPTH EVERY OTHER CELL OR TO LOCAL BUILDING CODE.

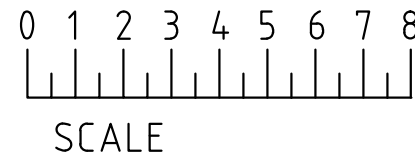

ODAY BANAT

ODAY BANAT
LOT 107 CAUGHRON DR SEVIERVILLE TN

PAGE
A3.0

EOBLLC-FR
11-12-2025

11-12-2025

REV Ver1.0